

DVD or VCR Player



Touch Screen

To find your DVD or VCR, Take Control of— VCR or DVD. They work in an identical way except DVD has a menu control to be able to get past the menu window, and play the disk.

Key Points

Keep in mind, this is the same as playing a DVD or VCR at home, the controls are the same, they are just on a Touch Screen in front of you:

- This will display on your projector, not your computer.
- It will not record on panopto (to do this, play the DVD on the computer instead).
- If it fails to see the DVD disk, try the computer , if it jumps or shudders, clean it with a lint free cloth, from the centre out to the edge.
- If it fails to play the VCR tape cleanly, tap the bottom of the tape against your hand, ensure the magnetic tape is taut, try again.
- Call the Hotline 6066 if you think it is the player at fault.

25

If you need support call the Hotline on 6066