

Touch Screen is not active

How do I recognise a Touch Screen?

- Labelled 'touch screen' along the top
- Chunkier screen, no keyboard
- Normally sits to the side of the normal login computer
- Fingerprints on the screen

1. Touch Screen
2. Computer Screen
3. Computer Screen



Touch screen not active?

Check that all the monitors are on and that the lights on the power buttons are green, normally found on the bottom right of the monitor.



Press your finger gently but firmly on the display area of the touch screen.

Give it half a second to respond to your touch.

If you need support call the Hotline on 6066