

# Video - The Far End can't see me or my PC

Check these settings



1. Take Control Of Video Conference.

2. Slide Show Send, Room PC is selected.  
(Their projector 2)



3. Your Camera is selected.



4. What You Want Them To See, LECTURN (You) (Their projector 1).




You will now need to ask the far end to check these settings, you are unable to do this yourself

5. Their projector is turned on.

6. Their projector 1 is set to VC Near (for your presentation).

7. Their projector 2 is set to VC Far (for a view of you.)

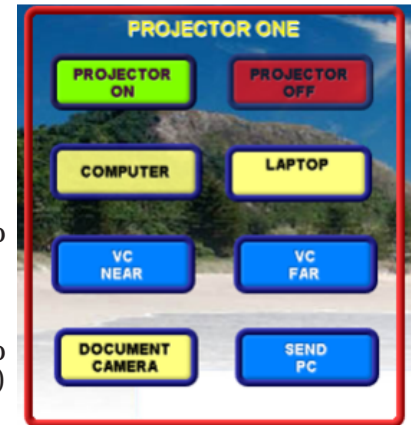

If you need support call the Hotline on 6066