


Audio

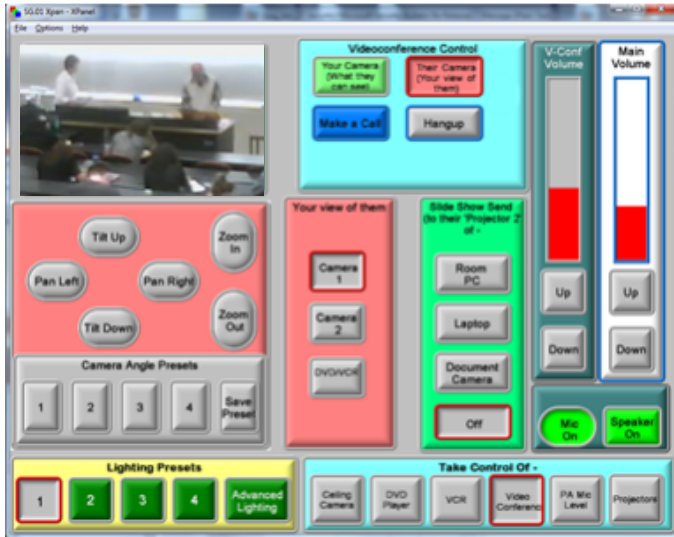

Touch Screen

Audio should be available on the top right corner of all pages, with audio on the right hand side. The default volume is normally around 50% on the touch screen.

Key Points

Main audio is available on any page, but there are more options when you Take control of Video Conference:

- Make sure Mic and Speaker are ON (green) and are not muted (Red).
- Can you hear the volume change when using the UP button on Main Volume?