

Video—Using the VCR or DVD Player



1. Take control of DVD Player (or VCR for tapes).



2. Turn the Projector ON.



3. Press Play.



4. If necessary, use Menu to navigate.

NOTE: If you do accidentally click full screen on the touch screen, press the Push to exit full screen video button, found at the bottom left.



If you need support call the Hotline on 6066